



Important Information

Ultradot 6 / Matchdot II Elevation Adjustment Instructions

Your Ultradot 6 or Matchdot II has an elevation adjustment knob which can be easily reset to zero after sighting in. See instructions below.

- 1) Properly mount your new sight.
- 2) Sight in your Ultradot using instructions found in users manual.
- 3) Loosen the Elevation Turret Screw. This will allow the turret to spin freely without moving the dot itself.
- 4) Turn the elevation knob until the Zero Indicator Line matches up with the Indicator Dot on the sight body.
- 5) Tighten the Elevation Turret Screw.

Note: This screw must be kept snug in order to prevent turret from moving during regular use. However, do not over tighten or you may damage your sight.

